

इंटरनेट

मानक

### Disclosure to Promote the Right To Information

Whereas the Parliament of India has set out to provide a practical regime of right to information for citizens to secure access to information under the control of public authorities, in order to promote transparency and accountability in the working of every public authority, and whereas the attached publication of the Bureau of Indian Standards is of particular interest to the public, particularly disadvantaged communities and those engaged in the pursuit of education and knowledge, the attached public safety standard is made available to promote the timely dissemination of this information in an accurate manner to the public.

“जानने का अधिकार, जीने का अधिकार”

Mazdoor Kisan Shakti Sangathan

“The Right to Information, The Right to Live”

“पुराने को छोड़ नये के तरफ”

Jawaharlal Nehru

“Step Out From the Old to the New”

IS 4668 (1985): Ammonium nitrate for explosives [CHD 26: Explosives and Pyrotechnics]



“ज्ञान से एक नये भारत का निर्माण”

Satyanarayan Gangaram Pitroda

“Invent a New India Using Knowledge”



“ज्ञान एक ऐसा खजाना है जो कभी चुराया नहीं जा सकता है”

Bhartrhari—Nitiśatakam

“Knowledge is such a treasure which cannot be stolen”



BLANK PAGE



IS : 4668 - 1985  
(Reaffirmed 2011)

*Indian Standard*  
SPECIFICATION FOR  
AMMONIUM NITRATE FOR EXPLOSIVES  
*( First Revision )*

Second Reprint OCTOBER 1999  
( Incorporating Amendments No. 1 and 2 )

UDC 661.525 : 662.221

© Copyright 1999

**BUREAU OF INDIAN STANDARDS**  
MANAK BHAVAN, 9 BAHADUR SHAH ZAFAR MARG  
NEW DELHI 110002

*Indian Standard*

SPECIFICATION FOR  
AMMONIUM NITRATE FOR EXPLOSIVES

*( First Revision )*

Explosives and Pyrotechnics Sectional Committee, CDC 51

*Chairman*

SHRI R. G. DEOLALIKER

Brahmapuri Dandia Bazar, Vadodara

*Members*

*Representing*

SHRI AVTAR SINGH	National Fertilizers Limited, New Delhi
SHRI P. K. BANERJEE	National Mineral Development Corporation Ltd, Hyderabad
SHRI S. O. GARG ( <i>Alternate</i> )	
SHRI M. L. DUTTA	Ordnance Factory, Bhandara
SHRI B. M. LAL ( <i>Alternate</i> )	
SHRI B. R. DAVE	Chief Controller of Explosives, Nagpur
SHRI H. MUKHERJEE ( <i>Alternate</i> )	
SHRI C. M. DEOSTHALE	IBP Co Ltd, New Delhi
DR P. R. NAMBIAR ( <i>Alternate</i> )	
DIRECTOR ( MINES SAFETY EQUIPMENT )	Directorate General of Mines Safety, Dhanbad
JOINT DIRECTOR OF MINES SAFETY ( <i>Alternate</i> )	
SHRI A. GRAHADURAI	National Fireworks Factory, Sivakasi
SHRI S. RAMESH BABU ( <i>Alternate</i> )	
SHRI N. K. JAIN	Narendra Explosives Ltd, Dehra Dun
SHRI J. W. KAWATHEKAR ( <i>Alternate</i> )	
SHRI V. KRISHNAMURTHI	Central Mining Research Station, Dhanbad
SHRI M. M. BHATTACHARYA ( <i>Alternate</i> )	
SHRI B. MINJ	Directorate General of Technical Development, New Delhi
SHRI A. K. CHATTERJEE ( <i>Alternate</i> )	
SHRI K. P. R. PILLAY	Directorate General Ordnance Factories, Calcutta
DR S. B. RAY	Ministry of Defence ( DGI )
SHRI G. D. PALKAR ( <i>Alternate</i> )	
SHRI P. R. ROY	Central Mine Planning & Design Institute Limited, Ranchi
DR N. SADASIVAN	Ministry of Defence ( R & D )
SHRI K. U. B. RAO ( <i>Alternate</i> )	

( *Continued on page 2* )

© Copyright ( 1999 )

**BUREAU OF INDIAN STANDARDS**

This publication is protected under the *Indian Copyright Act* ( XIV of 1957 ) and reproduction in whole or in part by any means except with written permission of the publisher shall be deemed to be an infringement of copyright under the said Act.

## IS : 4668 - 1985

( Continued from page 1 )

<i>Members</i>	<i>Representing</i>
SHRI S. S. SALODKAR	Coal India Ltd, Calcutta
SHRI S. N. NANDY ( <i>Alternate</i> )	
SHRI P. SATYANARAYANA	Development Commissioner ( Small Scale Industries ), New Delhi
DR S. K. KAPOOR ( <i>Alternate</i> )	
SHRI H. N. SRIHARI	Indian Explosives Ltd, Calcutta
SHRI S. SESHAN ( <i>Alternate</i> )	
DR S. R. YOGANARASIMHAN	IDL Chemicals Ltd, Hyderabad
DR O. D. PRASAD ( <i>Alternate</i> )	
SHRI SATISH CHANDER, Director ( Chem )	Director General, ISI ( <i>Ex-officio Member</i> )
	<i>Secretary</i>
	SHRI R. K. BAJAJ Assistant Director ( Chem ), ISI

### Raw Materials Subcommittee, CDC 51 : 4

#### *Convener*

SHRI A. P. MANJREKAR IDL Chemicals Ltd, Hyderabad

#### *Members*

SHRI R. SRINIVASAN ( <i>Alternate</i> to Shri A. P. Manjrekar )	
SHRI D. P. BASU	Ministry of Defence ( DGI )
SHRI N. V. PILLAI ( <i>Alternate</i> )	
DR N. S. BANKAR	Explosives Research and Development Laboratory, Pune
SHRI K. M. AGARWAL ( <i>Alternate</i> )	
DR P. R. NAMBIAR	IBP Co Ltd, New Delhi
DR P. RASTOGI ( <i>Alternate</i> )	
SHRI A. GRAHADURAI	National Fireworks Factory, Sivakasi
SHRI S. RAMESH BABU ( <i>Alternate</i> )	
SHRI V. N. S. MATHUR	Directorate General Ordnance Factories, Calcutta
SHRI M. K. GHOSH ( <i>Alternate</i> )	
DR ANIL PANDIT	Deepak Nitrite Ltd, Vadodara
SHRI J. T. VOHRA ( <i>Alternate</i> )	
SHRI N. K. SAMANTA	Indian Explosives Ltd, Calcutta
SHRI B. S. ROY ( <i>Alternate</i> )	

***Indian Standard***  
**SPECIFICATION FOR**  
**AMMONIUM NITRATE FOR EXPLOSIVES**  
**( *First Revision* )**

**0. FOREWORD**

**0.1** This Indian Standard ( First Revision ) was adopted by the Indian Standards Institution on 16 August 1985, after the draft finalized by the Explosives and Pyrotechnics Sectional Committee had been approved by the Chemical Division Council.

**0.2** This standard was first published in 1967. The original standard covered only one grade of ammonium nitrate. In this revision, four grades of ammonium nitrate depending upon the use, have been specified, namely, for ammonium nitrate fuel oil ( ANFO ), slurry explosives, nitroglycerine based explosives and defence.

**0.3** Ammonium nitrate is extensively used both in commercial and military explosives. Small crystals of ammonium nitrate with a large surface-volume ratio, facilitates the manufacture of amatol.

**0.4** For the purpose of deciding whether a particular requirement of this standard is complied with, the final value, observed or calculated, expressing the result of a test or analysis, shall be rounded off in accordance with IS : 2 - 1960\*. The number of significant places retained in the rounded off value should be the same as that of the specified value in this standard.

---

**1. SCOPE**

**1.1** This standard prescribes requirements and the methods of sampling and test for ammonium nitrate intended primarily for use in explosives.

**2. GRADES** — The material shall be of the following four grades namely:

*Grade 1* — For ammonium nitrate fuel oil ( ANFO );

*Grade 2* — For slurry type explosives;

---

\*Rules for rounding off numerical values ( *revised* ).

## IS : 4668 - 1985

*Grade 3* — For nitroglycerine based explosives; and

*Grade 4* — For defence purposes.

### 3. REQUIREMENTS

**3.1 Description** — The material shall be in the form of prills, lumps or crystals, as agreed to between the purchaser and the supplier, and colourless or showing only a brownish tint. It shall be free from grit, foreign matter and visible impurities.

**3.1.1** The different grades of material shall be of the following sizes:

- a) *Grade 1* — 0.8 to 2.8 mm,
- b) *Grade 2* — 2.9 to 100 mm, and
- c) *Grade 3* — As agreed to between the purchaser and the supplier.  
*and 4*

**3.2** The material may be with or without anti-caking agent of organic or inorganic nature, the limit for organic compounds being 0.1 percent. Where anti-caking agents are added they shall be compatible with the explosives and shall not cause undue frothing in the manufacturing process of explosives and the quantity and nature of the agent shall be declared by the supplier.

**3.3** The material shall comply with the requirements specified in Table 1, when tested according to the methods prescribed in Appendix A. Reference to the relevant clauses of Appendix A is given in col 7 of Table 1.

### 4. PACKING AND MARKING

#### 4.1 Packing

**4.1.1** The material shall be packed in polyethylene lined bags or in such other containers as agreed to between the purchaser and the supplier. The polyethylene sheet shall not be less than 0.05 mm thick.

**4.2 Marking** — Each package shall be legibly and indelibly marked with the following information:

- a) Name and grade of the material;
- b) Mass of the material in the package;
- c) Manufacturers' name or his recognized trade-mark, if any;
- d) Year of manufacture; and
- e) Lot number to enable the batch of manufacture to be traced from records.



TABLE 1 REQUIREMENTS FOR AMMONIUM NITRATE FOR EXPLOSIVES

( Clause 3.3 )

SL No.	CHARACTERISTIC	REQUIREMENT FOR				METHOD OF TEST ( REF TO CL. NO. IN APPENDIX A )
		Grade 1 (3)	Grade 2 (4)	Grade 3 (5)	Grade 4 (6)	
(1)	(2)					(7)
i)	Moisture, percent by mass, <i>Max</i>	0.3	3.0	0.1	0.15	A-2
ii)	Matter insoluble in water, percent by mass, <i>Max</i>	0.3	0.05	0.01	0.25	A-3
iii)	Non-volatile matter, percent by mass, <i>Max</i>	0.2	—	0.1	1.0	A-4
iv)	Chlorides (as Cl), percent by mass, <i>Max</i>	—	0.05	0.006	0.05	A-5
v)	Nitrites (as ammonium nitrite), percent by mass, <i>Max</i>	—	0.02	0.000 5	0.001	A-6
vi)	Acidity (as nitric acid), percent by mass, <i>Max</i>	—	0.01	0.01	0.01	A-7
vii)	Iron (as Fe), percent by mass, <i>Max</i>	—	0.002	0.002	—	A-8
viii)	Calcium (as calcium nitrite), percent by mass, <i>Max</i>	—	0.5	—	—	A-9
ix)	pH of 10 percent aqueous solution	—	5 to 6	4 to 7	—	A-10
x)	Organic matter, percent by mass, <i>Max</i>	0.5	Nil	0.1	0.5	A-11
xi)	Grit, percent by mass, <i>Max</i>	—	Nil	Nil	Nil	A-12
xii)	Purity (on dry basis), percent by mass, <i>Min</i>	99.2	99.0	99.8	98.7	A-13
xiii)	Metals and compounds of metals other than alkali metals, calcium and iron, percent by mass, <i>Max</i>	—	—	0.02	0.02	A-14
xiv)	Phenols or phenolic bodies	—	—	To pass the test	To pass the test	A-15
xv)	Pyridine, percent by mass, <i>Max</i>	—	—	Nil	0.003	A-16
xvi)	Thiocyanate (as ammonium thiocyanate), percent by mass, <i>Max</i>	—	—	Nil	0.002	A-17
xvii)	Prussian blue and allied compounds (as Prussian blue), percent by mass, <i>Max</i>	—	—	Nil	0.1	A-18
xviii)	Oil absorption, percent by mass, <i>Min</i>	7	—	—	—	A-19
xix)	Bulk density, g/cm <sup>3</sup>	to 0.85	—	0.92 to 1.02	—	A-20
xx)	Total nitrogen, percent by mass, <i>Min</i>	34.5	—	—	—	A-21
xxi)	Sulphates (as ammonium sulphate), percent by mass, <i>Max</i>	—	—	0.03	0.6	A-22

## IS : 4668 - 1985

4.2.1 The product may also be marked with Standard mark.

4.2.2 The use of the Standard Mark is governed by the provisions of the *Bureau of Indian Standards Act, 1986* and the Rules and Regulations made thereunder. The details of conditions under which the licence for the use of Standard Mark may be granted to manufacturers or producers may be obtained from the Bureau of Indian Standards.

## 5. SAMPLING

5.1 The procedure for drawing representative samples from a lot, the number of tests to be performed and the criteria for conformity of the material to the requirements of this specification shall be as prescribed in Appendix B.

# APPENDIX A

( Clause 3.3 )

## ANALYSIS OF AMMONIUM NITRATE FOR EXPLOSIVES

### A-1. QUALITY OF REAGENTS

A-1.1 Unless specified otherwise, pure chemicals and distilled water ( see IS : 1070 - 1977\* ) shall be employed in tests.

NOTE — 'Pure chemicals' shall mean chemicals that do not contain impurities which affect the result of analysis.

### A-2. DETERMINATION OF MOISTURE

A-2.0 Two methods are prescribed, namely, air-oven method and Karl Fisher method. In case of dispute, Karl Fisher method shall be the referee method.

#### A-2.1 Air-Oven Method

A-2.1.1 *Procedure* — Weigh rapidly 10 g of the material and transfer it to a weighing dish with a close fitting lid. Close the dish and weigh it accurately. Lift the lid and expose the material in an oven at  $100 \pm 2^{\circ}\text{C}$  for 2 hours. Then close the lid, remove the dish to a desiccator for about half an hour to cool and reweigh it. Repeat the operation till a constant mass is obtained.

---

\*Specification for water for general laboratory use ( *second revision* ).

**A-2.1.2 Calculation**

$$\text{Moisture, percent by mass} = 100 \times \frac{M_1 - M_2}{M_1 - M}$$

where

$M_1$  = mass in g of the material and the dish before heating,

$M_2$  = mass in g of the material and the dish after heating,  
and

$M$  = mass in g of empty dish.

**A-2.2 Karl Fisher Method**

**A-2.2.1** Carry the determination according to the method prescribed in IS : 2362 - 1973\*.

**A-3. DETERMINATION OF MATTER INSOLUBLE IN WATER**

**A-3.1 Procedure** — Take 100 g of the sample in a 500-ml beaker and dissolve in about 200 ml of hot water. Filter the residue through Whatman No. 40 filter paper. Wash the residue with water till free from all soluble matter. Dry in an oven maintained at  $100 \pm 2^\circ\text{C}$ . Brush out the residue in a weighed silica crucible and weigh. Deduct the quantity of the declared anti-caking agent insoluble in water, if any, from the dried residue.

**A-3.1.1 Calculation**

$$\text{Matter insoluble in water, percent by mass} = 100 \times \frac{M_1}{M}$$

where

$M_1$  = mass in g of the dried residue, and

$M$  = mass in g of the material taken for the test.

**A-4. DETERMINATION OF NON-VOLATILE MATTER**

**A-4.1 Procedure** — Heat a porcelain or silica basin with cover about 6 cm in diameter in an oven at  $100 \pm 2^\circ\text{C}$  for half an hour. Cool it in a desiccator and weigh. Place about 10 g of the material in the dish, moisten the ammonium nitrate with sulphuric acid, replace the cover and weigh accurately. Uncover the dish and heat the sample initially over low flame till the fume subsides and finally over strong flame having a temperature of  $800 \pm 20^\circ\text{C}$  for 1 hour. Remove the burner and replace the cover, cool the basin and the cover in a desiccator to room temperature and weigh. Repeat the operation till constant mass is obtained.

---

\*Determination of water by Karl Fisher method (*first revision*).

**A-4.2 Calculation** — Calculate the non-volatile matter as follows:

$$\text{Non-volatile matter, percent by mass} = \frac{100 \times (M_3 - M_1)}{M_2 - M_1}$$

where

$M_1$  = mass in g of the empty dish and the cover,

$M_2$  = mass in g of the dish and the cover with the sample taken, and

$M_3$  = mass in g of the dish and the cover with the sample after heating.

## A-5. DETERMINATION OF CHLORIDES

**A-5.1 Outline of the Method** — Chloride is completely precipitated as silver chloride by the addition of an excess of standard silver nitrate solution and the excess is back titrated with ammonium thiocyanate.

### A-5.2 Reagents

**A-5.2.1 Silver Nitrate Solution** — 0.1 N.

**A-5.2.2 Ammonium Thiocyanate** — 0.1 N.

**A-5.2.3 Concentrated Nitric Acid**

**A-5.2.4 Ferric Alum Indicator** — 40 percent.

**A-5.2.5 Nitrobenzene**

**A-5.3 Procedure** — Weigh about 10 g of the sample accurately in a 250-ml conical flask. Dissolve with heating in 100 ml of water. Add 5 ml of concentrated nitric acid followed by 25 ml silver nitrate solution through a pipette. Shake for two minutes and titrate against 0.1 N thiocyanate using 2 ml of ferric alum indicator and 5 ml of nitrobenzene till there is a persistent colour change. Run a blank with all the reagents and water but without the sample.

### A-5.4 Calculation

$$\text{Chlorides, percent by mass} = (A - B) \times N \times \frac{35.45}{1000} \times \frac{100}{M}$$

where

$A$  = volume of ammonium thiocyanate consumed for blank titration,

$B$  = volume of ammonium thiocyanate consumed for sample titration,

$N$  = normality of ammonium thiocyanate solution, and

$M$  = mass in g of sample taken for the test.

## A-6. DETERMINATION OF NITRITE

**A-6.0** Two methods are prescribed, namely, colorimetric method and volumetric method. Colorimetric method is recommended for routine analysis. In case of dispute, volumetric method shall be the referee method.

### A-6.1 Colorimetric Method

**A-6.1.1** *Outline of the Method* — When dilute solutions of sulphanilic acid and  $\alpha$ -naphthylamine are acted upon by nitrous acid, a red colouration is produced which may be used for the colorimetric determination of nitrites. The full colour does not appear at once. A satisfactory colour comparison can be made after 10 to 15 minutes provided the sample and standard are treated in the same manner.

#### A-6.1.2 Reagents

**A-6.1.2.1** *Sulphanilic acid reagent (solution 1)* — Dissolve 0.6 g of sulphanilic acid in 100 ml of 20 percent (v/v) dilute hydrochloric acid.

**A-6.1.2.2**  *$\alpha$ -Naphthylamine reagent (solution 2)* — Dissolve 0.48 g of  $\alpha$ -naphthylamine in 100 ml of 20 percent (v/v) dilute hydrochloric acid.

**A-6.1.2.3** *Standard nitrite solution* — Dissolve 4.93 g of sodium nitrite in water and dilute with deionized water. Dilute 10 ml of standard solution to one litre with deionized water.

**A-6.1.2.4** *Sodium acetate (2 M)* — Dissolve 16.4 g of anhydrous sodium acetate in water and dilute to 100 ml with water.

**A-6.1.3** *Procedure* — Place the quantity of the sample containing about 0.03 mg or less of nitrite in a 50-ml volumetric flask. Add 1 ml of sulphanilic acid reagent, mix well and allow to stand at least for 3 minutes but not more than 10 minutes at room temperature in diffused light. Introduce 1 ml of  $\alpha$ -naphthylamine reagent and 1 ml of 2 M sodium acetate solution to act as buffer (pH 2 to 2.5). Dilute to volume and mix well. Use a photoelectric colorimeter with a green filter and measure transmittance. Construct a reference curve with known nitrate standards, preferably in the nitrite-nitrogen range of the sample and measure the concentration of the nitrite in the sample solution from the reference curve.

**A-6.1.4** *Calculation* — The concentration of nitrite is directly read from the reference curve and calculated as ammonium nitrite.

## A-6.2 Volumetric Method

### A-6.2.1 Reagents

A-6.2.1.1 *Potassium permanganate solution* — N/50.

A-6.2.1.2 *Sulphuric acid* — ( 1 : 1 ).

### A-6.2.2 Procedure

A-6.2.2.1 Weigh accurately about 30 g of sample and transfer to a 100-ml volumetric flask and dissolve with shaking in 40 ml of water. Make up the volume to the mark with water. Stopper the flask and shake well. Take up the solution in a burette.

A-6.2.2.2 Take 2.5 ml of freshly prepared N/50 potassium permanganate solution in a conical flask. Add 5 ml of sulphuric acid ( 1 : 1 ). Dilute to 40 ml with water and heat to around 60°C and titrate against sample solution taken in the burette till the pink colour disappears.

### A-6.2.3 Calculation

1 ml of 1 N potassium permanganate = 0.0320 g of ammonium nitrite.

## A-7. DETERMINATION OF ACIDITY AS NITRIC ACID

**A-7.0 Outline of the Method** — The dried material is dissolved in neutral acetone, water added to the solution and then titrated with sodium hydroxide solution.

### A-7.1 Reagents

A-7.1.1 *Acetone* — Neutralized to methyl red indicator ( see IS : 170-1976\* ).

A-7.1.2 *Standard Sodium Hydroxide Solution* — 0.01 N.

A-7.1.3 *Methyl Red Indicator* — Dissolve 1 g of methyl red ( water soluble ) in water and dilute the solution to 1 litre.

**A-7.2 Procedure** — Add about 2 to 10 g of the dried material weighed accurately to 0.01 g, to 100 ml of acetone. Shake the mixture vigorously for several minutes until solution is complete. Add 100 ml of water to solution with constant stirring. Boil off the acetone on a water bath, cool, filter through a filter paper ( Whatman No. 1 or its equivalent ), wash with two 10 ml portions of water and titrate the filtrate with standard sodium hydroxide solution using methyl red as indicator.

A-7.2.1 Run a blank determination using the same quantities of reagents.

---

\*Specification for acetone ( second revision ).

**A-7.3 Calculation**

Acidity ( as nitric acid ), percent by mass =  $\frac{6.3 (V_2 - V_1) N}{M}$

where

$V_1$  = volume in ml of standard sodium hydroxide solution required by the blank,

$V_2$  = volume in ml of standard sodium hydroxide solution required by the material,

$N$  = normality of standard sodium hydroxide solution, and

$M$  = mass in g of the dried material taken for the test.

**A-8. DETERMINATION OF IRON**

**A-8.1 Outline of the Method** — Ferric (but not ferrous) iron reacts with thiocyanate to give a series of intensely red coloured complexes which remain in true solution. In the colorimetric determination, excess of thiocyanate should be used since this increases the intensity and also stability of the colour. Strong acid (hydrochloric or nitric acid concentration 0.052 to 0.05 M ) should be present to suppress the hydrolysis of ferric iron.

**A-8.2 Reagents**

**A-8.2.1 Potassium Thiocyanate Solution** — Dissolve 20 g of potassium thiocyanate in 100 ml of water.

**A-8.2.2 Concentrated Nitric Acid** — See IS : 264 - 1976\*.

**A-8.2.3 Standard Solution of Iron ( Ferric )** — Dissolve 0.864 g of ferric ammonium sulphate in water, add 10 ml of concentrated nitric acid and dilute it to one litre. One ml of this solution is equivalent to 0.1 mg of iron ( as Fe ).

**A-8.3 Procedure** — Dissolve accurately 5 g of the material in 1:1 water-nitric acid mixture and evaporate to nearly dryness to expel excess of acid. Dilute slightly with water, oxidize any ferrous ion to the ferric state with dilute potassium permanganate solution ( 2g/l ), adding slowly dropwise until a slight pink colour remains after stirring well. Make up the solution to 250 ml or other suitable volume. Place 50 ml of the solution in a Nessler cylinder, add 5 ml of thiocyanate solution and 2 to 4 ml of 4 N nitric acid. Add the same amounts of reagents to 50 ml of water contained in a similar Nessler cylinder and run in standard iron

---

\*Specification for nitric acid ( *second revision* ).

solution from burette ( use long glass rod with flattened end for mixing ) until colours are matched. Note the exact volume ( X ml ) of the standard iron solution added. Repeat determination using 50 - X ml of water. Comparison of the standard and unknown should be made soon after preparation since the colour may fade on standing for a long time.

For estimating the concentration of ferric iron more accurately, the use of photoelectric colorimeter may be resorted to. A filter showing maximum transmission at or near 480 nm should be used. Standard solutions of ferric iron which are in the range of the concentration of ferric iron likely to be present in the sample are prepared and the transmittance of each such solution measured with photoelectric colorimeter. A reference curve is then prepared by plotting the concentration versus transmittance. Now the transmittance of the sample solution is also measured and from the reference curve, the concentration of ferric iron as [ Fe ( NO<sub>3</sub> )<sub>3</sub> ] is directly read.

#### A-8.4 Calculation

$$\text{Ferric iron [ as Fe ( NO}_3\text{ )}_3\text{ ] percent by mass} = \frac{m}{M} \times 100$$

where

$m$  = mass in g of ferric iron [ as Fe ( NO<sub>3</sub> )<sub>3</sub> ] as found out from the reference curve, and

$M$  = mass in g of the material taken for the test.

### A-9. DETERMINATION OF CALCIUM

**A-9.1 Outline of the Method** — Calcium, like some other metal ions, is complexed by disodium dihydrogen ethylene diamine tetra-acetate ( EDTA ) by choosing the proper pH and indicator. Using calcon as indicator, calcium can be estimated in the presence of magnesium since magnesium is precipitated quantitatively as magnesium hydroxide in the pH range of the reaction.

#### A-9.2 Reagents

##### A-9.2.1 Diethylamine

**A-9.2.2 Calcon Indicator** — Prepared by dissolving 0.2 g of the dyestuff in 50 ml of methyl alcohol.

**A-9.2.3 Standard Disodium Dihydrogen Ethylenediamine Tetra Acetate ( EDTA ) Solution** — Weigh 3.772 5 g of EDTA, dissolve in water free from polyvalent ions ( distilled water for this purpose should be passed through a column of cation exchange resins in the sodium form ) and make up to a volume of 1 000 ml. Concentration of the resulting solution



will be 0.01 M. ( If the EDTA is not of analytical reagent grade, then the solution prepared needs to be standardised against standard zinc chloride solution or magnesium chloride solution which is prepared from analytical reagent grade material or corresponding metal pellets of analytical reagent grade ).

**A-9.2.4 Sample Solution** — Weigh about one gram of the material accurately, dissolve in water from free polyvalent ions, filter and make up to 100 ml.

**A-9.3 Procedure** — Pipette out 10 ml of the sample solution ( see A-9.2.4 ) into 250 ml conical flask. Add about 40 ml of water and 5 ml of diethylamine, giving the mixture a pH of about 12.5. Under these conditions, magnesium, if present, precipitates quantitatively as the hydroxide. Add four drops of calcon indicator to the solution and titrate with standard EDTA solution with shaking until the colour changes from pink to a pure blue.

#### A-9.4 Calculation

$$\text{Calcium [ as Ca ( NO}_3)_2 ], \text{ percent by mass} = \frac{1.64 \times VM}{A}$$

where

$V$  = volume in ml of standard EDTA solution,

$M$  = molarity of standard EDTA solution, and

$A$  = mass in g of material taken for the test.

### A-10. DETERMINATION OF pH

**A-10.1 Procedure** — Dissolve 10.0 g of the material in 100 ml of water and measure the pH of the solution by means of a suitable pH meter using glass electrodes.

### A-11. DETERMINATION OF ORGANIC MATTER

**A-11.1 Procedure** — Weigh about 50 g of the sample accurately in a tall sintered-glass grade 2 thimble with a small hole at the top of wall for tying a small piece of wire. Put the thimble gently in the soxhlet extraction chamber with the help of the wire. Take 200 ml of the suitable solvent ( dichloromethane, diethyl ether, acetone, N-butyl acetate, etc ) in the flask containing a few glass beads. Fit the apparatus on a boiling water bath and continue the extraction for three hours. Remove the condenser and take out the thimble. Replace the condenser and continue boiling till majority of the solvent is recovered in the flask to a tared flat bottom glass basin with cover. Rinse the flask twice with the suitable solvent and transfer in the basin. Put the basin in a boiling water bath

## IS : 4668 - 1985

and evaporate the solvent. Place the basin in a water oven maintained at  $95 \pm 2^\circ\text{C}$  for two hours.

At the end of this period, replace the cover, cool the basin and the cover in a desiccator to room temperature and weigh. Repeat the drying operation till constant mass is obtained.

NOTE — When required, the manufacturers shall inform about the name of the solvent to be used.

### A-11.2 Calculation

$$\text{Organic matter, percent by mass} = \frac{M_2}{M_1} \times 100$$

where

$M_2$  = mass in g of the residue after complete evaporation of the solvent extract, and

$M_1$  = mass in g of the material taken for test.

### A-12. DETERMINATION OF GRIT

**A-12.1 Procedure** — Weigh about 50 g of the material into a 500-ml beaker, dissolve in adequate quantity of water and allow to stand until the insoluble material settles. Decant the supernatant liquor and filter the rest using a filter paper. Ignite the filter paper with the residue in a muffle furnace. Boil the residue for about 30 minutes with 20 ml aqua regia. After cooling the mixture, drain off the aqua regia and wash the residue thoroughly with water. Dry the residue in an air oven and sieve it through 125  $\mu\text{m}$  IS-sieve. Weigh the portion retained on the sieve and test for soda glass scratching. If it scratches soda glass then report it as percent grit.

### A-12.2 Calculation

$$\text{Grit, percent by mass} = \frac{M \times 100}{M_1}$$

where

$M$  = mass in g of the residue retained on 125  $\mu\text{m}$  IS-sieve, and

$M_1$  = mass in g of the material taken for test.

### A-13. DETERMINATION OF PURITY ON DRY BASIS

**A-13.0 Outline of the Method** — Ammonia from ammonium nitrate reacts quantitatively with excess of formaldehyde to produce nitric acid.



This nitric acid can be titrated against standard alkali.

**A-13.1 Reagents**

**A-13.1.1 Sodium Hydroxide** — 0.2 N.

**A-13.1.2 Hydrochloric Acid** — 0.2 N.

**A-13.1.3 Phenolphthaline** — 1 percent in alcohol.

**A-13.1.4 Formaldehyde 1:1** — Mix equal volumes of AR grade formaldehyde ( 37 percent *m/m* ) and water. Add few drops of phenolphthaline indicator and titrate against standard alkali to its light pink end point.

**A-13.2 Procedure** — Weigh exactly 0.4 g of sample into a 250-ml conical flask and dissolve in 20 ml of water. Add 50 ml of formaldehyde 1 : 1 reagent and warm the flask. Cool to room temperature and titrate against standard alkali till permanent light pink colour appears. Drain another 2 ml of alkali and note down the volume ( $V_1$ ). Keep it for 10 minutes and titrate against standard hydrochloric acid using a micro-burette till the solution becomes colourless and note down the volume ( $V_2$ ). Repeat the same experiment till concordant values are obtained.

**A-13.3 Calculations**

$$\text{Volume of sodium hydroxide required (V)} = V_1 - \frac{(V_2 \times N_2)}{N_1}$$

$$\text{Percent purity of ammonium nitrate} = \frac{V \times N_1 \times 8.005}{M}$$

$$\text{Purity ( on dry basis ), percent} = \frac{100 \times \text{Purity as obtained above}}{(100 - \text{moisture percent})}$$

where

$N_1$  = normality of sodium hydroxide,

$N_2$  = normality of hydrochloric acid, and

$M$  = mass of the sample in g.

**A-14. DETERMINATION OF METALS AND COMPOUNDS OF METALS OTHER THAN ALKALI METALS, CALCIUM AND IRON**

**A-14.1 Procedure** — Treat 5 g of the material in a porcelain crucible with 1 ml of concentrated sulphuric acid. Drive off the excess acid by gentle heating and heat the residue strongly. Extract the residue with dilute hydrochloric acid and test qualitatively for the presence of metallic radicals ( other than alkali metals, iron and calcium ) like lead, copper zinc and manganese. If any metallic impurity is detected, estimate quantitatively by a standard colorimetric method.

IS : 4668 - 1985

### A-15. DETERMINATION OF PHENOL OR PHENOLIC BODIES

**A-15.1 Procedure** — To a solution of 10 g of the material in 15 ml of water, add 100 ml of bromine water and 1 ml of concentrated hydrochloric acid. After vigorous shaking, no precipitate should appear in the solution after keeping for one hour.

### A-16. DETERMINATION OF PYRIDINE

**A-16.1** Triturate a little powdered borax rapidly with about 5 g of the material in a mortar. If the odour of pyridine is detected, estimate the amount of pyridine present as follows.

**A-16.2 Procedure** — Dissolve 100 g of the material in 300 ml of water in a 500-ml flask and add a few drops of methyl orange solution. Fit the flask with a rubber stopper through which passes a tap-funnel and a glass outlet tube. The outlet tube incorporating a bulb or other device to guard against a suck back, leads into a 500-ml conical flask containing sodium hydroxide solution and 4 ml of bromine, and dips below the surface of this solution. Close the conical flask with a rubber stopper through which also passes a distilling trap attached to a water condenser. Attach to the exit tube of the condenser a 250-ml conical flask as receiver containing a little water and fitted with guard tube of moistened glass beads.

**A-16.3** Add 5 ml of 1 N sodium hydroxide solution to the ammonium nitrate solution through the tap funnel and distil the solution slowly into the hypobromite solution. When about 50 ml of the ammonium nitrate solution has been distilled, steam distil the hypobromite solution by warming the flask of hypobromite and continuing the distillation of the ammonium nitrate solution. Titrate the pyridine so collected in the receiver with 0.1 N hydrochloric acid using methyl orange as indicator.

**A-16.4** Calculate the factor to be used in calculating the amount of pyridine present from the results of titration of aqueous solutions, containing known quantities of pyridine.

### A-17. DETERMINATION OF THIOCYANATE

**A-17.1 Procedure** — Dissolve 5 g of the material in about 80 ml of water. Filter the solution, if necessary, and make it up to 100 ml in a Nessler cylinder. Prepare similarly a series of standard solutions containing 5 g of pure thiocyanate free ammonium nitrate and different known amounts of ammonium thiocyanate. Add 2 ml of 10 percent ferric alum solution (containing 50 ml of concentrated nitric acid/litre)

to the contents of each cylinder, with stirring. Determine the amount of thiocyanate present in the material by comparing the colour of the solution under test with the standard solutions.

## **A-18. DETERMINATION OF PRUSSIAN BLUE AND ALLIED PRODUCTS**

**A-18.1 Procedure** — Warm 10 g, approximately, of the material with about 20 ml of 1 N nitric acid solution. If the resulting solution is coloured blue or contains blue coloured particles, estimate the prussian blue as follows.

**A-18.1.1** Dissolve 100 g of the material in about 100 ml of water and acidify the solution with 20 ml of 1 N nitric acid. Heat for 5 minutes and then filter. Treat the residue of prussian blue on the filter paper with 100 ml of 1 N potassium hydroxide solution, added in consecutive small portions and make up the resulting filtrate, containing potassium ferrocyanide, to a volume of 200 ml.

**A-18.1.2** Transfer a suitable aliquot portion of the ferrocyanide solution to a Nessler cylinder and add a 2 ml excess of 1 N nitric acid. Dilute the solution to 100 ml and add 5 ml of 10 percent ferric alum solution with stirring.

**A-18.1.3** Prepare similarly a series of standard solutions in Nessler cylinders, containing the same quantities of alkali, acid and ferric alum as in the first Nessler cylinder but with different known quantities of potassium ferrocyanide.

**A-18.2** Determine the amount of prussian blue present in the material by comparing the colour of the solution under test with the standard solutions.

## **A-19. DETERMINATION OF OIL ABSORPTION**

**A-19.1 Procedure** — 10 g of sample to be tested is placed in a dry 50-ml beaker. Ten ml of diesel oil ( HSD conforming to IS : 1460 - 1974\* ) is added to the sample in the beaker and the contents are left for exactly 10 minutes. The contents of the beaker are then transferred to a porcelain buchner funnel ( 6 cm internal diameter ) equipped with a Whatman No. 1 filter paper. A suction of 150 mm mercury is applied for three minutes. The oiled sample is then transferred to a previously weighed watch glass. The mass of the oiled sample is calculated from

---

\*Specification for diesel fuels ( *second revision* ).

## IS : 4668 - 1985

the combined masses of the sample and the watch glass. The percent oil absorption is calculated as follows:

### A-19.2 Calculation

$$\text{Oil absorption, percent by mass} = \frac{M_2 - M_1}{M_1} \times 100$$

where


$M_2$  = mass in g of oiled sample, and

$M_1$  = mass in g of original sample.

## A-20. DETERMINATION OF BULK DENSITY

### A-20.1 Apparatus

**A-20.1.1** Assemble the apparatus as shown in Fig 1. The measuring cylinder *A* shall be of 20-ml capacity and shall conform to IS : 878-1975\*. The base of the measuring cylinder shall be ground flat. The distance between the flat-ground part of the base of the measuring cylinder *A* and the rubber base pad *B*, when the measuring cylinder *A* is raised to the full height, shall be  $25 \pm 2$  mm.

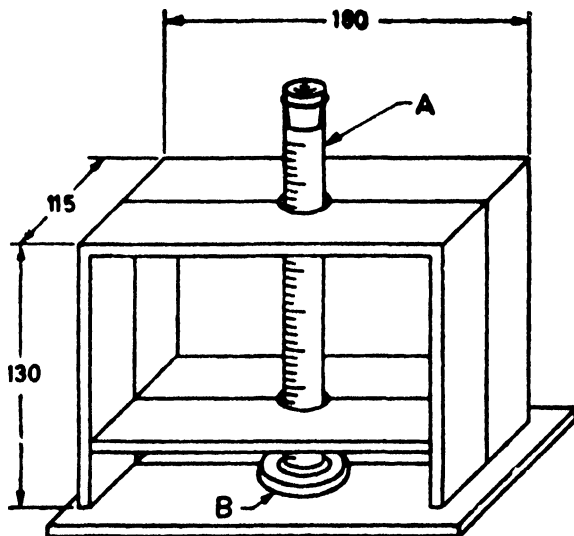

All dimensions in millimetres.

FIG. 1 APPARATUS FOR DETERMINATION OF BULK DENSITY

**A-20.1.2** The rubber base pad *B* shall have a shore hardness of 42 to 50.

**A-20.1.3** Pans of the balance shall be at least 10 cm in diameter and the balance shall be sensitive to less than 0.1 g.

\*Specification for graduated measuring cylinders (*first revision*).

**A-20.2 Procedure** — Place 50 g of the material in the graduated cylinder fitted in the apparatus and tap it until a constant volume of the material is obtained. Note down the volume of the material.

### A-20.3 Calculation

$$\text{Bulk density, g/cm}^3 = \frac{M}{V}$$

where

$M$  = mass in g of the material taken for the test, and

$V$  = volume of the material in the cylinder.

## A-21. DETERMINATION OF TOTAL NITROGEN ( AS N )

**A-21.0 Outline of the Method** — Ammonia is distilled off from an alkaline solution and absorbed in standard hydrochloric acid. The excess of acid is titrated with standard hydroxide solution.

**A-21.1 Apparatus** — Ammonia distillation apparatus as shown in Fig. 2.

### A-21.2 Reagents

**A-21.2.1 Sodium Hydroxide Solution** — 30 percent (  $m/v$  ).

**A-21.2.2 Standard Hydrochloric Acid** — 0.5 N.

**A-21.2.3 Standard Sodium Hydroxide Solution** — 0.5 N.

**A-21.2.4 Mixed Methyl Red Indicator Solution** — Dissolve 0.1 g of methyl red in 50 ml of ethyl alcohol and 0.05 g of methylene blue in 50 ml of ethyl alcohol and mix the two solutions.

**A-21.2.5 Devarda's Alloy** — Containing 45 parts of aluminium, 50 parts of copper and 5 parts of zinc.

**A-21.3 Procedure** — Weigh accurately 2.0 g of the prepared sample and transfer to the Kjeldahl flask, adding about 150 ml of water and a few porcelain beads. Add 6 to 7 g Devarda's alloy. Connect the apparatus as shown in Fig. 2. Measure into the beaker exactly 125 ml of standard hydrochloric acid and add 4 to 5 drops of the mixed indicator solution. Place the beaker so that the end of the delivery tube is below the surface of the acid. Pour about 25 ml of sodium hydroxide solution ( 30 percent ) into the tap funnel. Slowly drop the sodium hydroxide solution into the Kjeldahl flask by opening the tap of the funnel. Close the tap after delivering the entire quantity of sodium hydroxide. Start heating the Kjeldahl flask and circulate water in the condenser. After distilling about 150 ml into the receiver, remove the beaker and titrate the excess acid using 0.5 N sodium hydroxide solution. The end point is orange to green. Suggested indicator solution for the above determination is

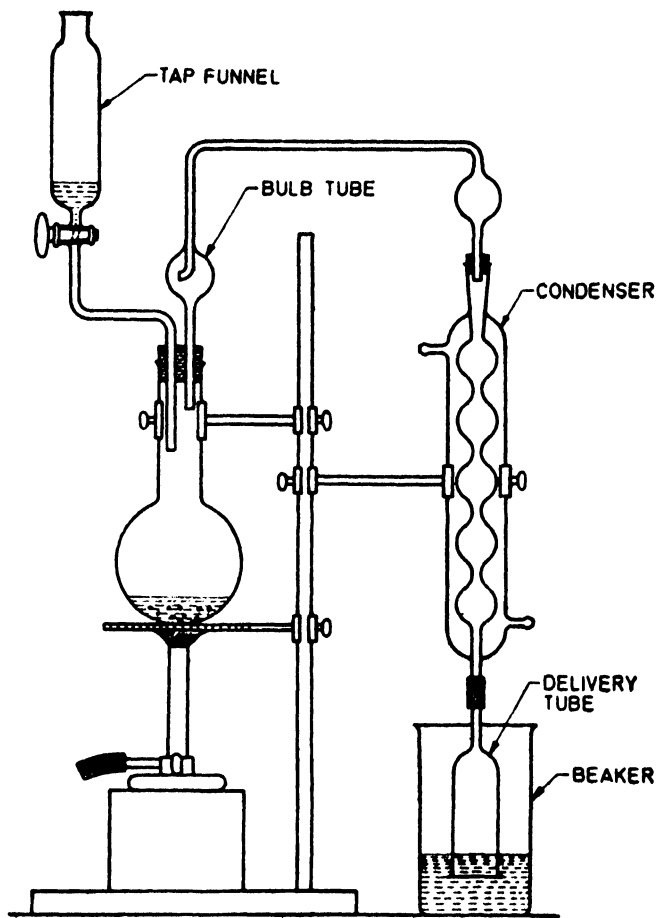


FIG. 2 APPARATUS FOR DETERMINATION OF NITROGEN methyl red and bromocresol green solution. It is prepared by dissolving 0.1 g of methyl red in 50 ml of ethyl alcohol and mixing the two solutions.

**A-21.4 Calculation**

$$\text{Total nitrogen ( as N ), percent by mass} = \frac{1.401 \times ( V_1 N_1 - V_2 N_2 )}{M}$$

where

$V_1$  = volume in ml of standard hydrochloric acid used,

$N_1$  = normality of standard hydrochloric acid,



$V_2$  = volume in ml of standard sodium hydroxide, solution,  
 $N_2$  = normality of standard sodium hydroxide solution, and  
 $M$  = mass in g of the material taken for the test.

## A-22. DETERMINATION OF SULPHATES

**A-22.0 Outline of the Method** — Sulphates are determined by comparing the turbidity produced with barium sulphate solution, against a standard turbidity in Nessler cylinders.

### A-22.1 Apparatus

**A-22.1.1 Nessler Cylinders** — 50-ml capacity.

### A-22.2 Reagents

**A-22.2.1 Sodium Carbonate** — Solid.

**A-22.2.2 Dilute Hydrochloric Acid** — Approximately 2 N.

**A-22.2.3 Standard Sulphuric Acid** — 0.002 N.

**A-22.2.4 Barium Sulphate Reagent** — Dissolve 2.0 g of barium chloride in 75 ml of water, add 20 ml of 95 percent ( v/v ) ethyl alcohol and 5 ml of standard sulphuric acid. It shall be prepared afresh.

**A-22.3 Procedure** — Weigh accurately 10 g of the prepared sample into a porcelain dish and dissolve in 40 ml of water. Add 0.05 g of sodium carbonate and heat on a sand-bath at about 120°C to volatilize water and then heat over a very low flame until the evolution of white fumes has ceased. Finally heat the dish at 600°C in a furnace for 15 min. Cool, dissolve the residue in 10 ml of water, add 1 ml. of dilute hydrochloric acid and filter through a Whatman No. 41 filter paper. Transfer the filtrate to a Nessler cylinder, add 10 ml of water and 1 ml of barium sulphate reagent. Mix well and allow to stand for 5 min.

**A-22.3.1** Prepare a series of sulphate standard turbidities with different known volumes of standard sulphuric acid and 1 ml of barium sulphate reagent in the similar manner and compare the turbidities. Calculate the sulphate content as ammonium sulphate in the sulphate standard in which the turbidity most closely matches with that in the solution of the material.

## APPENDIX B

( Clause 5.1 )

### SAMPLING OF AMMONIUM NITRATE FOR EXPLOSIVES

#### B-1. GENERAL REQUIREMENTS OF SAMPLING

**B-1.0** In drawing, preparing, storing and handling test samples, the following precautions and directions shall be observed.

**B-1.1** Samples shall not be drawn in an exposed place.

**B-1.2** Precautions shall be taken to protect the samples, the material being sampled, the sampling instrument and the containers for samples from adventitious contamination.

**B-1.3** To draw a representative sample, the contents of each container selected for sampling shall be mixed thoroughly by suitable means.

**B-1.4** The samples shall be placed in clean, dry, air-tight glass or other suitable containers which have no action on the material.

**B-1.5** The sample containers shall be of such a size that they are almost completely filled by the sample.

**B-1.6** Each sample container shall be sealed air-tight with a stopper after filling, and marked with all particulars of the material ( *see 4.2* ) and the date of sampling.

**B-1.7** Samples shall be stored in such a manner that the temperature of the material does not vary unduly from the ambient temperature.

#### B-2. SCALE OF SAMPLING

**B-2.1 Lot** — In a single consignment of the material all the containers of the same, type and size and drawn from the same batch of manufacture shall constitute a lot. If a consignment is known to consist of different batches of manufacture or of different types and sizes of containers, the containers belonging to the same batch type and size shall be grouped together and each such group shall constitute a separate lot.

**B-2.1.1** For ascertaining the conformity of the material in a lot to the requirements of the specification, tests shall be carried out for each lot separately. The number of containers to be selected at random from lots of different sizes shall be in accordance with Table 2.

**TABLE 2 SCALE OF SAMPLING**  
( Clause B-2.1.1 )

LOT SIZE ( <i>N</i> ) (1)	SAMPLE SIZE ( <i>n</i> ) (2)
Up to 15	3
16 „ 25	4
26 „ 50	5
51 „ 100	7
101 and above	10

**B-2.1.2** In order to ensure randomness of selection, random number tables shall be used. In case such tables are not available, the following procedure is recommended for use:

Arrange the containers in the lot in a systematic order and starting from anyone, count them as 1, 2, 3, ....., etc, up to  $r$  and so on, where  $r$  is the integral part of  $N/n$  ( $N$  and  $n$  being the lot size and sample size respectively). Every  $r$ th container thus counted shall be withdrawn to constitute the sample.

### **B-3. PREPARATION OF TEST SAMPLES**

**B-3.1** From each of the containers selected, draw a small representative portion of the material not less than 100 g in mass.

**B-3.2** Out of these portions, small but equal quantity of the material shall be taken and mixed thoroughly, to form a composite sample of mass not less than 150 g. The composite sample shall be divided into 3 equal parts, one for the purchaser, another for the supplier and the third to be used as a referee sample.

**B-3.3** The remaining portion of the material from each container shall be divided into 3 equal parts and transferred to separate bottles, giving full identification particulars of the samples on the bottle. The material in each bottle constitutes an individual sample. One of these three sets ( each set containing one bottle representing each container sampled ) shall be marked for the purchaser, another for the supplier and the third for the referee.

**B-3.4** The referee test samples consisting of a composite sample and a set of individual samples shall bear the seal of both the purchaser and the supplier. They shall be kept at a place agreed to between the purchaser and the supplier and shall be used in case of a dispute between the two.

**IS : 4668 - 1985**

**B-4. NUMBER OF TESTS**

**B-4.1** Tests for the determination of moisture shall be performed on each of the individual samples.

**B-4.2** Tests for the determination of all the remaining characteristics given in 3 and Table 1 shall be carried out on the composite sample.

**B-5. CRITERIA FOR CONFORMITY**

**B-5.1** From each set of the individual test results for moisture, the average ( $\bar{X}$ ) and the range ( $R$ ) of the test results shall be computed ( range  $R$  is defined as the difference between the maximum and the minimum values of the test results ).

**B-5.2** For declaring the conformity of the lot to the specification requirements of all other characteristics tested on the composite sample, the test results shall meet the corresponding requirements specified in Table 1.

## BUREAU OF INDIAN STANOARDS

### Headquarters:

Manak Bhavan, 9 Bahadur Shah Zafar Marg, NEW DELHI 110002  
Telephones: 323 0131, 323 3375, 323 9402 Fax :+ 91 011 3234062, 3239399, 3239382  
E - mail: bis@vsnl.com. Internal: <http://wwwdel.vsnl.net.in/bis.org>

<i>Central</i>	<i>Laboratory:</i>	<i>Telephone</i>
Plot No. 20/9, Site IV, Sahibabad Industrial Area, Sahibabad 201010		77 00 32

### *Regional Offices:*

Central : Manak Bhavan, 9 Bahadur Shah Zafar Marg, NEW DELHI 110002	323 76 17
*Eastern : 1/14 CIT Scheme VII, V.I.P. Road, Kankurgachi, CALCUTTA 700054	337 86 62
Northern : SCO 335-336, Sector 34-A, CHANDIGARH 160022	60 38 43
Southern : C.I.T. Campus, IV Cross Road, CHENNAI 600113	235 23 15
†Western : Manakalaya, E9, MIDC, Behind Marol Telephone Exchange, Andheri (East), MUMBAI 400093	832 92 95

### *Branch Offices:*

'Pushpak', Nurmohamed Shaikh Marg, Khanpur, AHMEDABAD 380001	550 13 48
‡Peenya Industrial Area, 1st Stage, Bangalore-Tumkur Road, BANGALORE 560058	839 49 55
Commercial-cum-Office Complex, Opp. Dushera Maidan, E-5 Arera Colony, Bitten Market, BHOPAL 462016	72 34 52
62/63, Ganga Nagar, Unit VI, BHUBANESWAR 751001	40 36 27
Kalai Kathir Building, 670 Avinashi Road, COIMBATORE 641018	21 01 41
Plot No. 43, Sector 16 A, Mathura Road, FARIDABAD 121001	28 88 01
Savitri Complex, 116 G.T. Road, GHAZIABAD 201001	71 19 96
53/5 Ward No.29, R.G. Barua Road, 5th By-lane, GUWAHATI 781003	54 11 37
5-8-56C, L.N. Gupta Marg, Nampal Station Road, HYDERABAD 500001	320 10 84
E-52, Chitranjan Marg, C- Scheme, JAIPUR 302001	37 38 79
117/418 B, Sarvodaya Nagar, KANPUR 208005	21 68 76
Seth Bhawan, 2nd Floor, Behind Leela Cinema, Naval Kishore Road, LUCKNOW 226001	21 89 23
NIT Building, Second Floor, Gokulpat Market, NAGPUR 440010	52 51 71
Patliputra Industrial Estate, PATNA 800013	26 28 08
Institution of Engineers (India) Building, 1332 Shivaji Nagar, PUNE 411005	32 36 35
'Sahajanand House' 3rd Floor, Bhakinagar Circle, 80 Feet Road, RAJKOT 360002	36 85 86
T.C. No. 14/1421, University P. O. Palayam, THIRUVANANTHAPURAM 695034	32 21 04
*Sales Office is at 5 Chowringhee Approach, P.O. Princep Street, CALCUTTA 700072	27 10 85
†Sales Office is at Novelty Chambers, Grant Road, MUMBAI 400007	309 65 28
‡Sales Office is at 'F' Block, Unity Building, Narashimaraja Square, BANGALORE 560002	222 39 71